




HP ElitePad 900 Service Tool


Quick Setup



If connected, disconnect the AC adapter from the HP ElitePad 900.

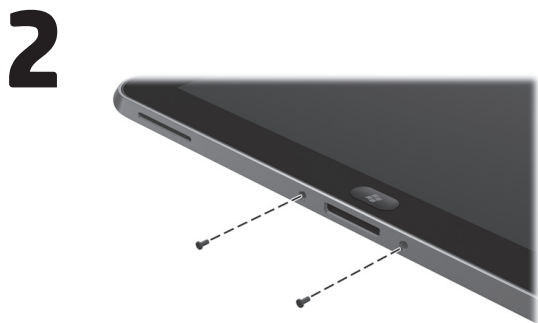


Use a Phillips P00 screw driver to remove the two Phillips PM1.25x3.50 screws that secure the display glass on either side of the docking connector.

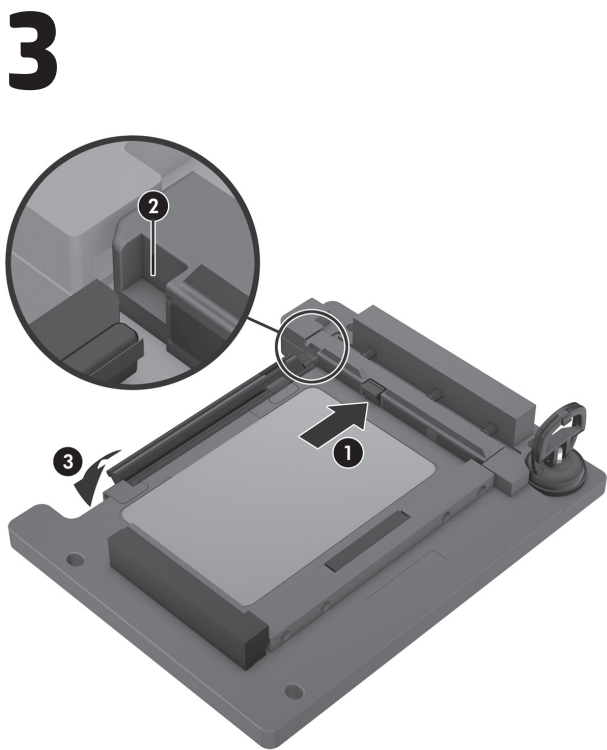


1. Move the retention bar **1** to the right until the notch **2** in the retention bar allows the retention gate to open.
2. Open the retention gate **3**.




Place the tablet on the service tool **1** and slide the tablet forward until it is firmly seated with the service tool docking connector **2**.

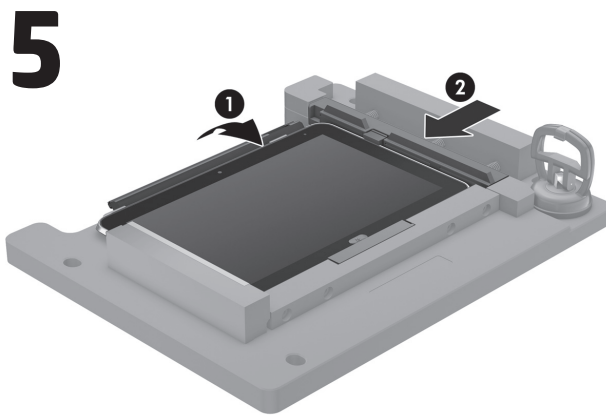

Close the retention gate **1** and release the retention bar **2**.

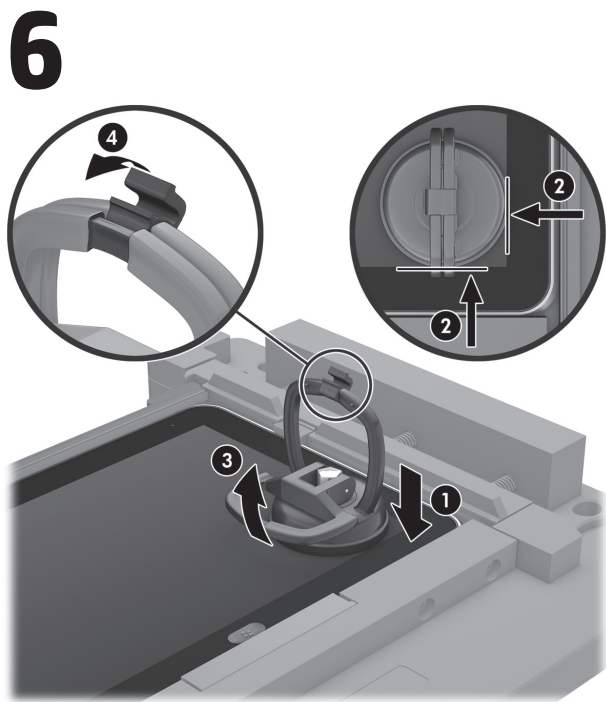


1. Place the suction cup **1** on the lower right corner of the tablet display glass, making sure to place the suction cup inside the edges of the border **2** of the display glass.
2. Raise the suction cup handle **3**.
3. Lock the two suction cup handles together **4**.

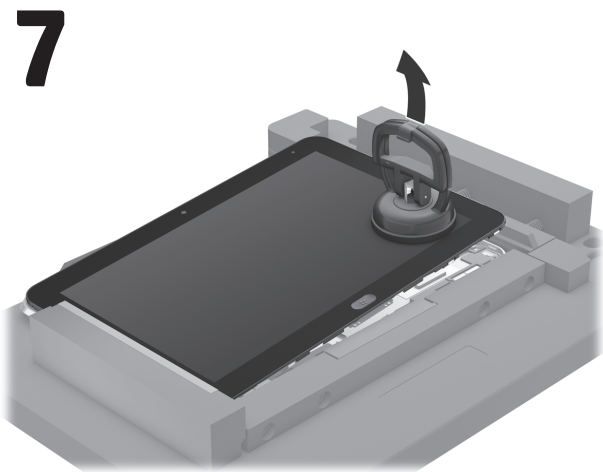


CAUTION: Do not lift the right edge of the display glass more than 1/4-inch from the tablet when releasing the display glass. Failure to follow this caution can result in damage to the tablet components.

Firmly lift up on the suction cup to release the right side of the display assembly approximately 1/4-inch from the tablet.

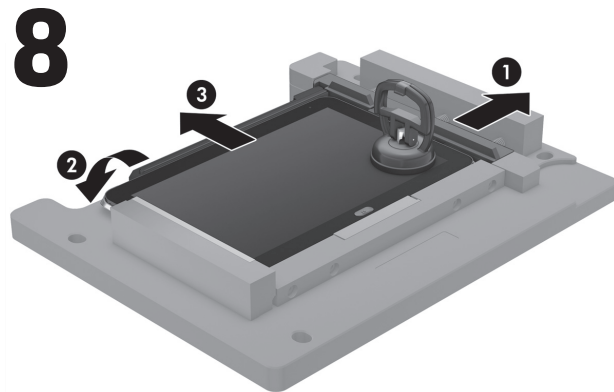

1. Slide and hold the retention bar **1** until the notch in the retention bar allows the retention gate to open.
2. Open the retention gate **2**.
3. Slide the tablet out of the service tool **3**.

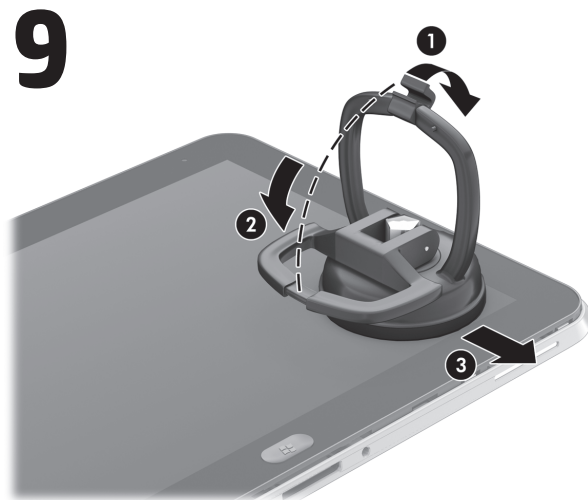

1. Disconnect the suction cup handles **1**.
2. Lower the suction cup handle **2**.
3. Remove the suction cup **3**.

© Copyright 2013 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: January 2013

Replace this box with PI statement
as per spec.



706553-001